


РЗ, Р4 - установка выходного напряжения стабилизатора







Рәңгестары						
T _{un}	A1	U1	U3	U4	U5	U6
K50-16	C1, C2 C7...C10		04, C89	C2, C4, C7		
K4-1		C				
K73-9	C3, C4		C10, C11, C14, C15, C16, C19, C29, C30, C49...C52, C55, C56, C63, C64, C86 C74...C76, C79, C81, C84, C85, C87.			
K10-78			C9, C3, C5, C8, C12, C16, C22...C24, C27, C28, C31...C35, C38, C39, C44...C47, C53, C54, C59, C60, C65...C67, C69, C72, C88.	C1, C3, C5, C6, C8		C2...C5
K50-35			C1, C6, C7, C17, C68, C70, C74, C73, C77, C78, C90.			C6...C13
K31-14			C9, C13, C40, C41			
K26-1			C20, C24, C36, C37			
K15-5						C1
K73-77			C25, C26, C42, C43, C48, C57, C59, C61, C59, C89, C93.			

PЕЗУЛТАТЫ				
C1-4	R1... R22	R1,R2,R4...R10,R12...R41, R43...R58,R60...R68,R70...R75, R78...R90,R92...R102,R104...R147, R150...R192,R195...R213,R221...R293.	R1...R23, R26...R32, R34...R36	R1...R12 R5...R8
МЛТ			R24	R1,R2,R3,R11
C13-38		R3,R4,R42,R59,R69,R76,R77 R91,R103,R145,R155,R183,R184, R219...R229,R148,R149.		R3,R4


אברהם
ה

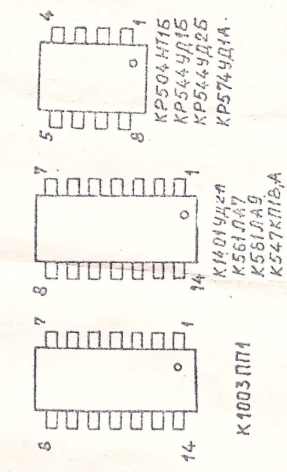

 
Плата индикации

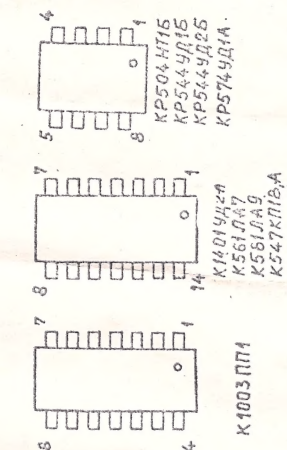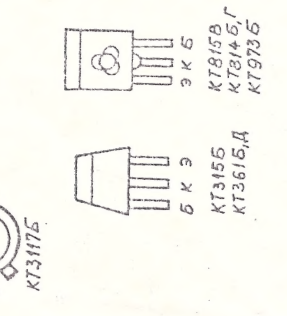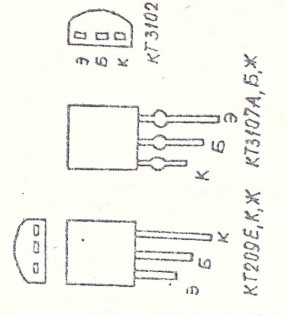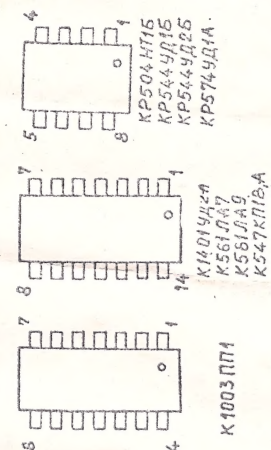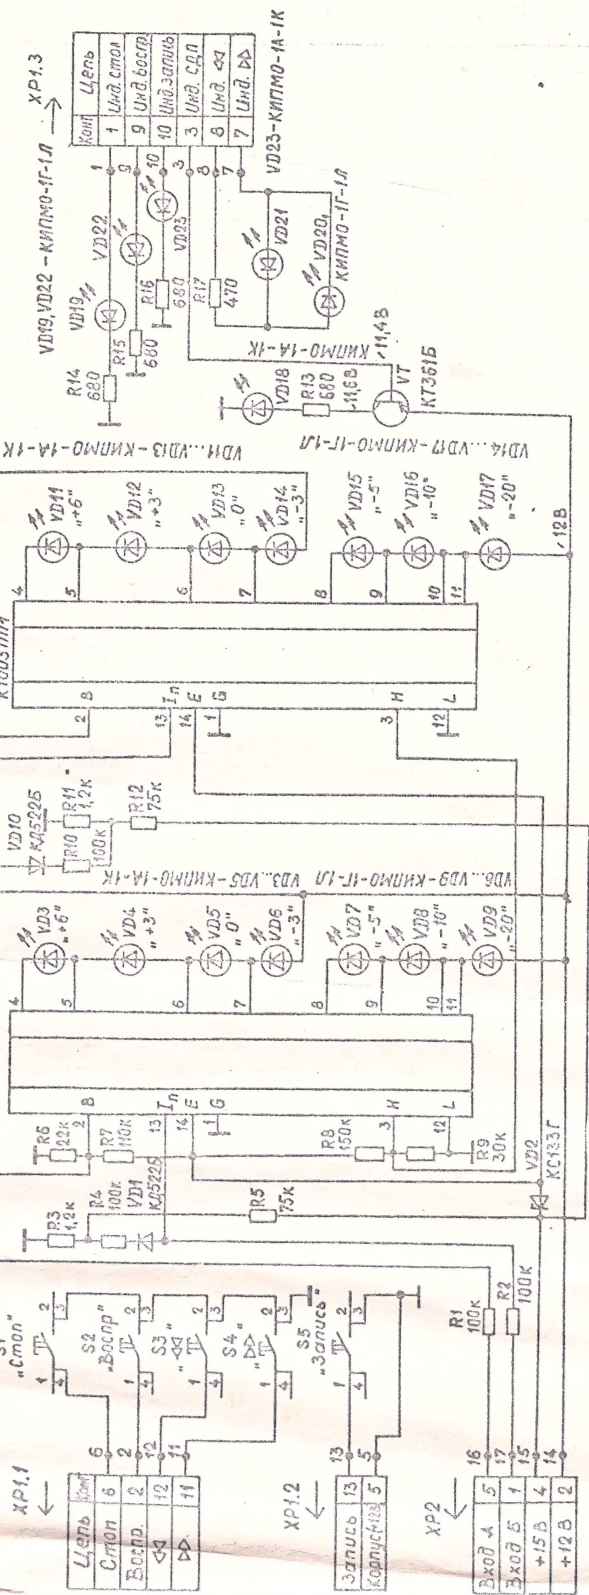

Датчик абстотона

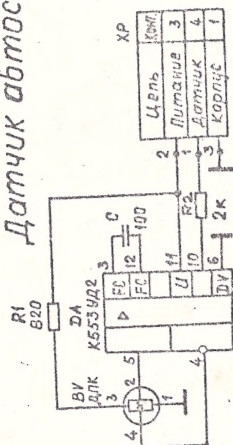

плата переключателя

 

Плата входов

